

## 2000m Laser Rangefinder Module



JIO-M020X miniature laser rangefinder module adopts 905nm semiconductor laser components, with low power consumption, small size, stable performance and other characteristics, suitable for thermal imaging, night vision and other handheld mobile devices and miniaturized UAV pod equipment integration.


- Measurement range: 5-2000 meters
- Measurement of trees  $\geq$  1400 meters
- Measurement of deer  $\geq$  800 meters
- Measurement accuracy  $\pm$ 1m
- Weight  $\leq$ 14g

### 2km LRF Module parameters

Model		JIO-M010X
Laser wavelength		905nm
Ranging capability	Building	1000m
	Trees	800m

Mini range	5m
Resolution	±0.1m
Operating Current	≤170mA
Standby current	≤33mA
Communication Interface	TTL
Operating Temperature	-20°C~+55°C
Storage Temperature	-30°C~+60°C
Input Voltage	3.3-5V
Beam divergence angle	5 mard
Ranging Frequency	1Hz
Power	≤1 mW Safe for human eyes
Ranging method	pulse
Weight	14g
Starting instantaneous current	DC3V power supply 2A max.
Size	≤23*23*46mm

STA-M020X 2000m laser rangefinder module pinout is defined as shown in the figure,interface TTL

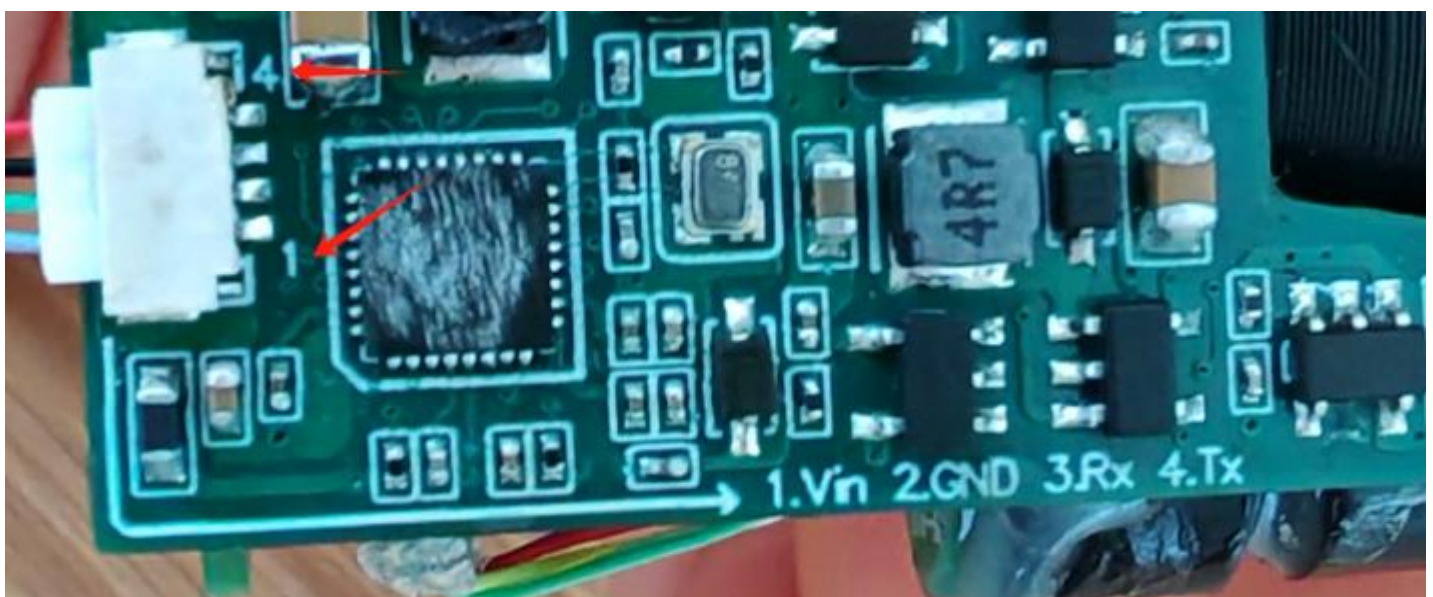

Electrical Characteristics				
Parameter	Test condition	Min	Max	Units
Operating voltage (Vin)	T=25°C	3	5.0	V
Working current	Standby(T=25°C, Vin=3.0V)	-	≤35.0	mA
	Ranging(T=25°C, Vin=3.0V)	-	≤170.0	mA

### Communication Command Chart

Master Command		
Command code	Description	Broadcast add. response
0x80	Read rangefinder status	NO
0x81	Read measuring result	NO
0x83	Start ranging	NO
0x84	Stop ranging	NO
0x9E	Communication parameter program	YES
0xBE	Read communication parameter	YES
0xC0	Communication test	YES
<b>0xC1</b>	<b>Read Firmware Version</b>	<b>YES</b>
0x8F	Red Laser ON / OFF	YES
Slave Response		
Recognition code	Description	
0x60	Simple reponse Frame	
0x01	Range data frame	
0x20	rangefinder status frame	
0x21	Communication parameter frame	
0xE0	Error message frame	

**NOTE:**

- The Communication Frame Format:  
SlaveID + instruction + parameter +checksum
- The interval between two adjacent frames has to be at least the time of 1.5 byte when sent out, when it is less than 1ms, it is regarded as 1ms;

- 600BPS: 25ms
- 1200BPS: 12.5ms
- 2400BPS: 6.25ms
- 4800BPS: 3.125ms
- 9600BPS: 1.56ms
- 19200BPS: 1ms(0.78ms < 1ms, take 1ms)

### 3. Sending calculate of checksum;

This module uses the verification mode of byte by byte accumulation sum, SlaveID is not included in the verification, sending checksum at last.

Such as calculate check sum of scanning mode instruction "0x83 0x40":

- A、 Calculate accumulation sum :  $0x83 + 0x40 = 0xC3$ ;
- B、 Take LSB[D7..D0]:  $0xC3$ ;
- C、 Calculate 2's complement:  $0x100 - 0xC3 = 0x3D$ ,  $0x3D$  is checksum;

Add slave address when mater sends:  $0x10\ 0x83\ 0x40\ 0x3D$

### 4. Verification receipt;

Such as receive communication frame:  $0x10\ 0x83\ 0x40\ 0x3D$ , verification not including slave address  $0x10$

- A、 Calculate accumulation sum:  $0x83 + 0x40 + 0x3D = 0x100$ ;
- B、 Take LSB of accumulation sum:  $0x00$ ;  $0x00$  is verification result;

If verification result is  $0x00$ , that means received data is right; If verification result is not  $0x00$ , that means received data is wrong.

## Module Command Description

Note:In the example, the slave address of each command is  $0x10$ ;in application, the slave address will be the programmed one.

### 1、 Communication test (0xC0) ;

Master sends		
Command code	Parameter	Description
0xC0	None	
Slave responses		
Recognition code	Parameter	Description
0x60	None	
Example		
Master sends: $0x10\ 0xC0\ 0x40$ ; $0x40$ is checksum		
Slave response: $0x10\ 0x60\ 0xA0$ ; $0xA0$ is checksum		

### 2、 Command slave to start ranging (0x83);

Master sends
--------------

Command code	Parameter	Description
0x83	byte1	D7: Reserve
		D6: Continuous ranging mode, 0 = off; 1 = on;
		D5: Fog mode, 0 = off; 1 = on;
		D4: Data unit, 0 = meter; 1 = yard;
		D3 - D0: Working Mode, 0 = ranging; 1 = speed; 2 = Small Target Mode;

### Slave responses

Recognition code	Parameter	Description
0x60	None	If slave is set as automatic export mode, slave responds 0x60 first after reception of start ranging command, after ranging is finished, it will then send out ranging result;

### Example

Master sends:

0x10 0x83 0x00 0x7D: Mode 0 is for single measure, data unit is meter;

0x10 0x83 0x40 0x3D: Mode 0 is for continuous measure, data unit is meter;

0x10 0x83 0x10 0x6D: Mode 0 is for single measure, data unit is yard;

0x10 0x83 0x20 0x2D: Mode 0 is for continuous measure, data unit is yard;

Slave response:

0x10 0x60 0xA0;

Note: 1、 If module data export method is set as query mode, then it can only do single measure;

2、 In speed mode, continuous ranging function is null, that is no continuous speed measure;

3、 Fog mode is only valid for device with fog mode function;

4、 Slave will send 0x60 response frame after reception of start ranging command, it will start to send ranging result after ranging is finished.

5、 Small Target Mode was supported only in V7.00 or newer version;

3、 command slave stop ranging(0x84);

Master sends		
Command code	Parameter	Description
0x84	None	

Note: After master sends command to slave to do continuous ranging, it needs to send this command to slave to stop ranging. If master sends command to slave to do single time ranging, then no need to send this command, cause slave will stop ranging automatically after ranging is finished.

4、 reading slave status(0x80);

Master sends		
Command code	Parameter	Description
0x80	None	
Slave responses		
Recognition code	Parameter	Description
0x20	byte1	D7: 1 = Busy; 0 = Ranging finished, Master can read result; D6: 1 = Module has some error; D5 - D2: Reserve; D1: 1 = Angle sensor enabled; D0: 1 = Angle sensor has some error;
	byte2	Reserve

## 5、 read range finder result(0x81);

Master sends		
Command code	Parameter	Description
0x81	None	
Slave responses		
Recognition code	Parameter	Description
0x01	byte1	D7: 1 = Distance is invalid; D6: 1 = Angle is invalid; D5: Data resolution, 0 = 0.5/LSB; 1 = 0.1/LSB; D4: Data unit, 0 = meter; 1 = yard; D3 - D0: Working Mode, 0 = Ranging; 1 = Speed;
	byte2	When distance is valid: Distance[D15..D8]; When distance is invalid: 0x80 = Ranging no result; 0x81= System error;
	byte3	When angle is valid: Distance[D7..D0]; When angle is invalid: Reserve;
	byte4	Angle[D7..D0]: Data is 2's complement format; When measuring speed, not sending angle data;
Example		

- 1、 slave sends distance frame: 0x10 0x01 0x20 0x12 0xD7 0xFE 0xF8  
 distance value = 0x12D7 = 4823 = 482.3m  
 angle vlaue = 0xFE = -2°
- 2、 slave sends speed frame: 0x10 0x01 0x21 0x03 0xD7 0x04  
 speed value = 0x03D7 = 983 = 98.3km/h
- 3、 slave sends distance frame: 0x10 0x01 0xA0 0x80 0x00 0x01 0xDE  
 distance value null (First byte is 0xA0, D7 = 1 )  
 angle value = 0x01 = +1°

6、 write slave communication baud rate(0x9E);

Master sends		
Command code	Parameter	Description
0x9E	byte1	has to be 0x90
	byte2	Reserve
	byte3	Reserve
	byte4	baud rate setting: 0 = 1200BPS; 1 = 2400BPS; 2 = 4800BPS; 3 = 9600BPS; 4 = 19200BPS(Default);
Slave responses		
Recognition code	Parameter	Description
( please refer to the slave respons part of reading slave parameter )		
Example		
If master sends frame: 0x10 0x9E 0x90 0x00 0x00 0x04 0xCE; It's means: Set baud rate of slave as 19200BPS,		

Note:New baud rate is only valid after module is restarted;

7、 write slave address(0x9E);

Master sends		
Command code	Parameter	Description
0x9E	byte1	Must be 0x91
	byte2	Reserve

	byte3	Reserve
	byte4	slave new address(slave address can't be 0);
<b>Slave responses</b>		
Recognition code	Parameter	Description
( please refer to the slave respons part of reading slave parameter )		
<b>Example</b>		
To write slave address as 0x20, then master sends: 0x10 0x9E 0x91 0x00 0x00 0x20 0xB1		

- Note: 1. New slave address is valid after the device is restarted  
 2. 0x00 is broadcast address, so slave address can't be set as 0x00;  
 3. Default slave address is 0x10;

8、 write measured result export method(0x9E);

<b>Master sends</b>		
Command code	Parameter	Description
0x9E	byte1	Must be 0x92
	byte2	Reserve
	byte3	Reserve
	byte4	Measured result export method selecttion: 0 = Query mode(slave can only export data when master sends reading command) 1(Default) = Automatic mode (After ranging finished, it sends out data automatically);
<b>Slave responses</b>		
Recognition code	Parameter	Description
( Please refer to the slave respons part of reading slave parameter )		
<b>Example</b>		
To change data export to automatic exporting, then master sends: 0x10 0x9E 0x92 0x00 0x00 0x01 0xCF		

9、 Set UART IO voltage (0x9E);

<b>Example</b>		
Command code	Parameter	Description
0x9E	byte1	Must be 0x93
	byte2	Reserve



	byte3	Reserve
	byte4	UART IO voltage Setting: 72 - 199, 0.025V/LSB;
<b>Slave responses</b>		
Recognition code	Parameter	Description
( please refer to the slave respons part of reading slave parameter )		
<b>Example</b>		
Change UART IO voltage to 3.3V, then master sends: 0x10 0x9E 0x93 0x00 0x00 0x84 0x4B		

Note: VIO = Setting \* 0.025V, Default VIO = 3.3V

## 10、Reading communication parameter (0xBE);

<b>Master sends</b>		
Command code	Parameter	Description
0xBE	byte1	Must be 0x91 or 0x92
<b>Slave responses</b>		
Recognition code	Parameter	Description
0x21	byte1	Slave address: 0x01 - 0xFF
	byte2	D4: Data export method ; D3 - D0: Baud Rate setting;
	byte3	UART IO voltage setting

## 11、Slave sends wrong information (0xE0) ;

<b>Slave responses</b>		
Recognition code	Parameter	Description
0xE0	byte1	D7 - D3: Reserve; D2: 1 = Communication parameter error; D1: 1 = Unrecognizable commmand; D0: 1 = Checksum error;

## 12、Red Laser On/Off (0x8F) ;

<b>Master Sends</b>		
Command Code	Parameter	

0x8F	byte1	0x00: Red laser OFF; 0x01: Red laser ON;
------	-------	---

### 13、 Read Firmware Version(This command was supported only in V7.00 or newer version;) :

<b>Master Sends</b>		
<b>Command Code</b>	<b>Parameters</b>	
0xC1	not	
<b>Slave responses</b>		
<b>Recognition code</b>	<b>Parameters</b>	illustrate
0x61	byte0	Major Version(BCD)
	byte1	Minor Version(BCD)
<b>Example</b>		
Slave responses: 0x10 0x61 0x07 0x00 0x98 Data "0x07 0x00" means firmware version is V7.00.		